



Mounting Template

For Deutsch DT04-3P-L012, DT04-4P-L012 and DT04-4P-LE11
Flange Mount Receptacles

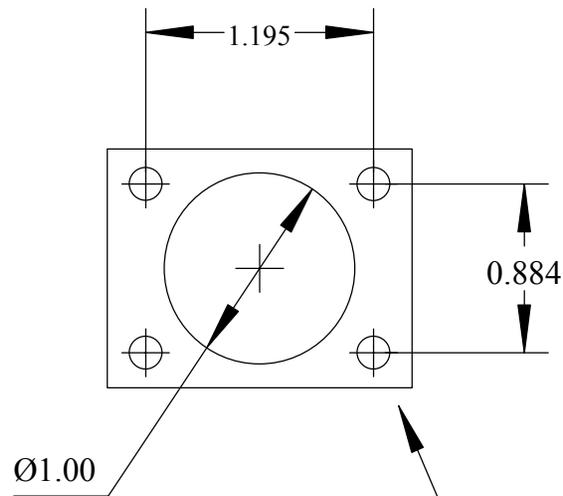

Note:
Check dimensions with rule after printing.
Make sure printer is set to print actual size.

4 Mounting Holes
Use 11/64" Drill for #8 Machine Screws
with nuts and flat washers
or
#29 Drill for 8-32 Tap

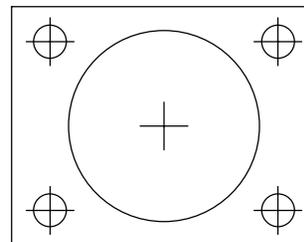

Cutout